


# ACCESSOIRES MULTIPLICATEURS-VERINS





## NOURRISES

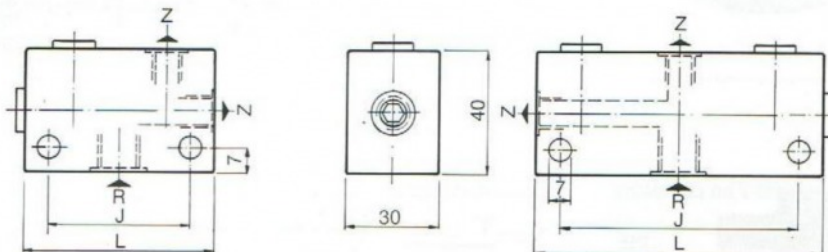

Modèle	Entrée d'huile R	Sortie d'huile Z	Nombre de sorties	Dimensions	
				J	L
CD 40 60	G3/8	G1/8	4	67	10
CD 40 90	G3/8	G1/8	5	68	14

## BRIDES CARREES

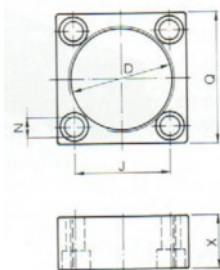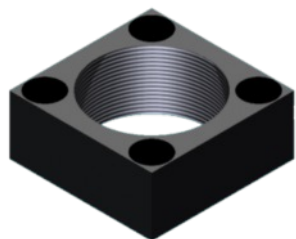


Modèle	Dimensions				
	D	J	N	Q	X
BQ 36	M36x1.5	38	6.5	50	20
BQ 48	M48x1.5	45	8.5	60	25
BQ 60	M60x2	60	10.5	80	30
BQ 68	M68x2	64	10.5	80	30

## ECROUS DE FIXATION



Modèle	Dimensions		
	C	D	X
GF 20	28	M20x1.5	5
GF 30	45	M30x1.5	7
GF 36	52	M36x1.5	8
GF 40	58	M40x1.5	9
GF 48	68	M48x1.5	10
GF 60	80	M60x2	11
GF 68	85	M68x2	12
GF 83	105	M83x2	15
GF 85	110	M85x2	16

## BRIDES RECTANGULAIRES

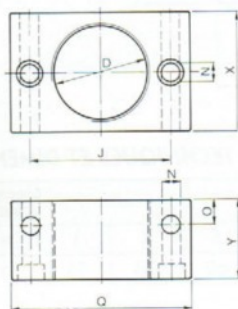

Modèle	Dimensions						
	D	J	N	O	Q	X	Y
BS 20	M20x1.5	35	6.5	10	50	25	30
BS 30	M30x1.5	50	8.5	12	70	40	30
BS 36	M36x1.5	55	8.5	12	75	40	30
BS 40	M40x1.5	60	8.5	12	80	50	40
BS 48	M48x1.5	70	8.5	12	90	60	40
BS 68	M68x1.5	90	10.5	15	110	80	50